

V 1.0.4

Smart Teach Tool URCap Manual

Deep | Link

Published 2023-May, HangZhou



Copyright

The information contained herein is property of Deep-Link Co. Ltd., and shall not be reproduced in its entirety or in part without prior written approval of Deep-Link Co. Ltd. The information herein is subject to change without notice and should not be interpreted as a commitment by Deep-Link Co. Ltd. This manual is periodically reviewed and revised. Deep-Link Co. Ltd. may take no responsibility for any errors or omissions in this document.

Version:	V 1.0.4-Build006
Date:	2022-June-15
Language:	English and Chinese

1. Brief Introduction

This URCap provides an add-in software to facilitate teaching with UR robot, it provides **ergonomic mechanical design** which makes the product very comfortable to use with, it implements a **freedrive button** on cobot tool flange, so the field user will feel convenient to drag cobot arm to desired position, it also has implemented extra two button for inserting taught waypoint in **MoveL, MoveJ, Move P, as well as MoveC**. In addition, it provides a **programmable LED band** for indicating program state. We believe this feature would be much useful when single operator is occupying several cobots and he can identify each cobot task progress with help of the LED signalization. To follow with Deep-Link's design DNA, it is a lean design to **re-using maximumly native Polyscope functions** and can help you quickly build your own decent application.

The compatibility minimum requirement is:

Universal Robots
e-series: 5.12 or newer.

2. Installation

1st step: click hamburger menu on top right of Polyscope.

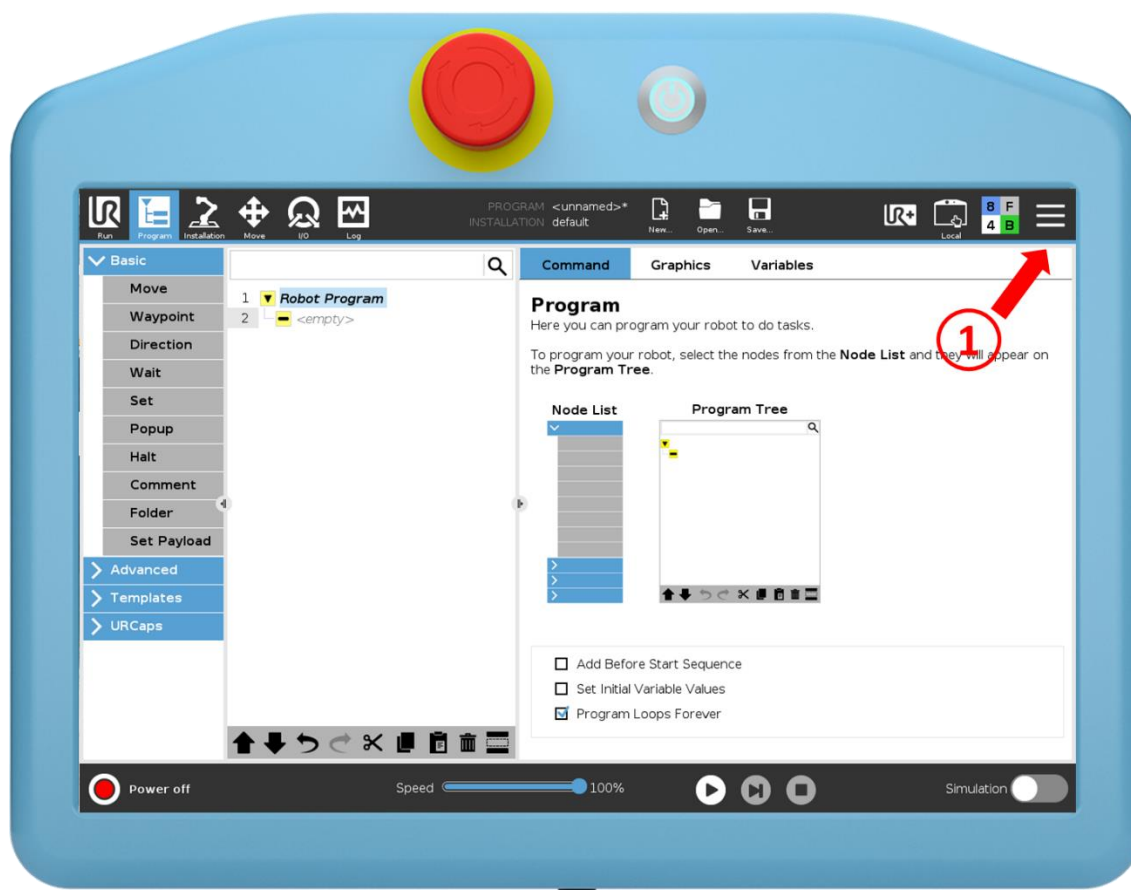


Figure 1 Installation 1st step

2nd step: Select Settings / System / URCaps, then click "+" button on button area.

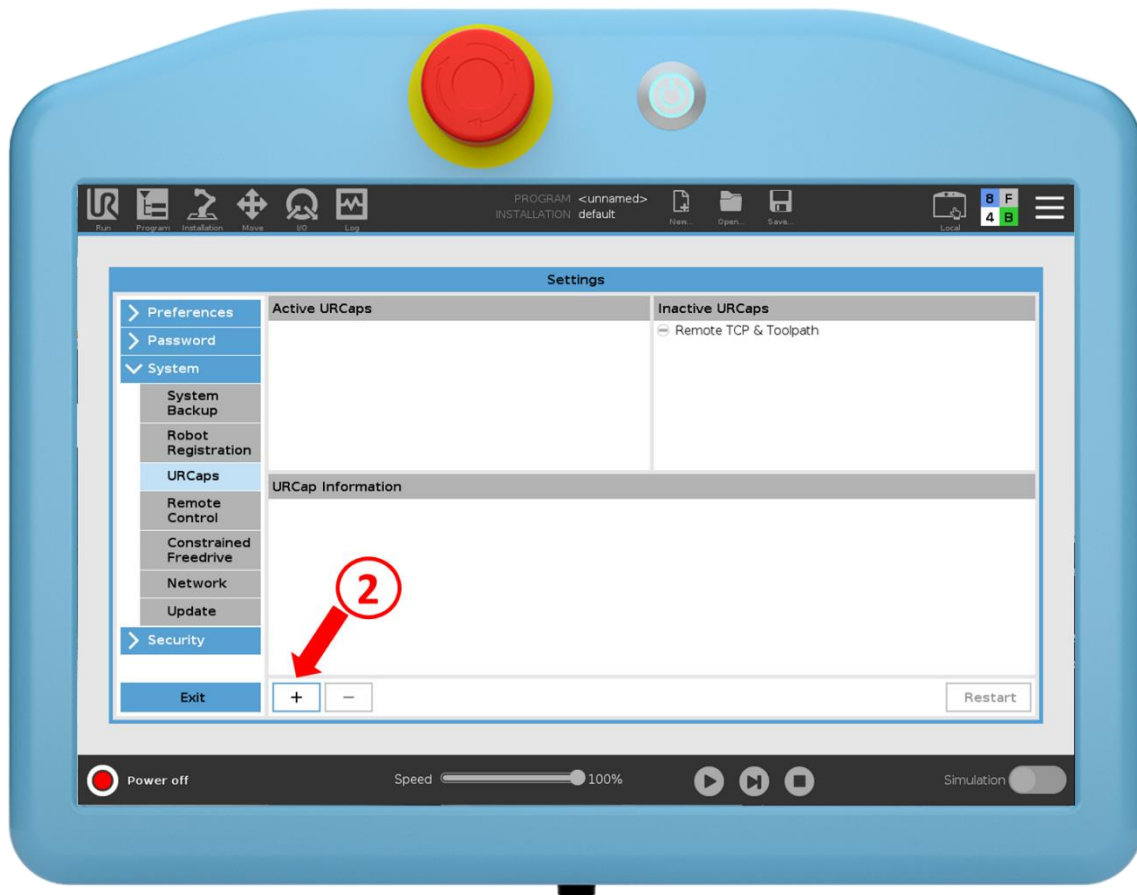


Figure 2 Installation 2nd step

3rd step: select the <SmartTool-1.0.x .urcap> file in the folder browser and click **Open** button, then click **Restart**. After restart Polyscope, it will display as below figure.

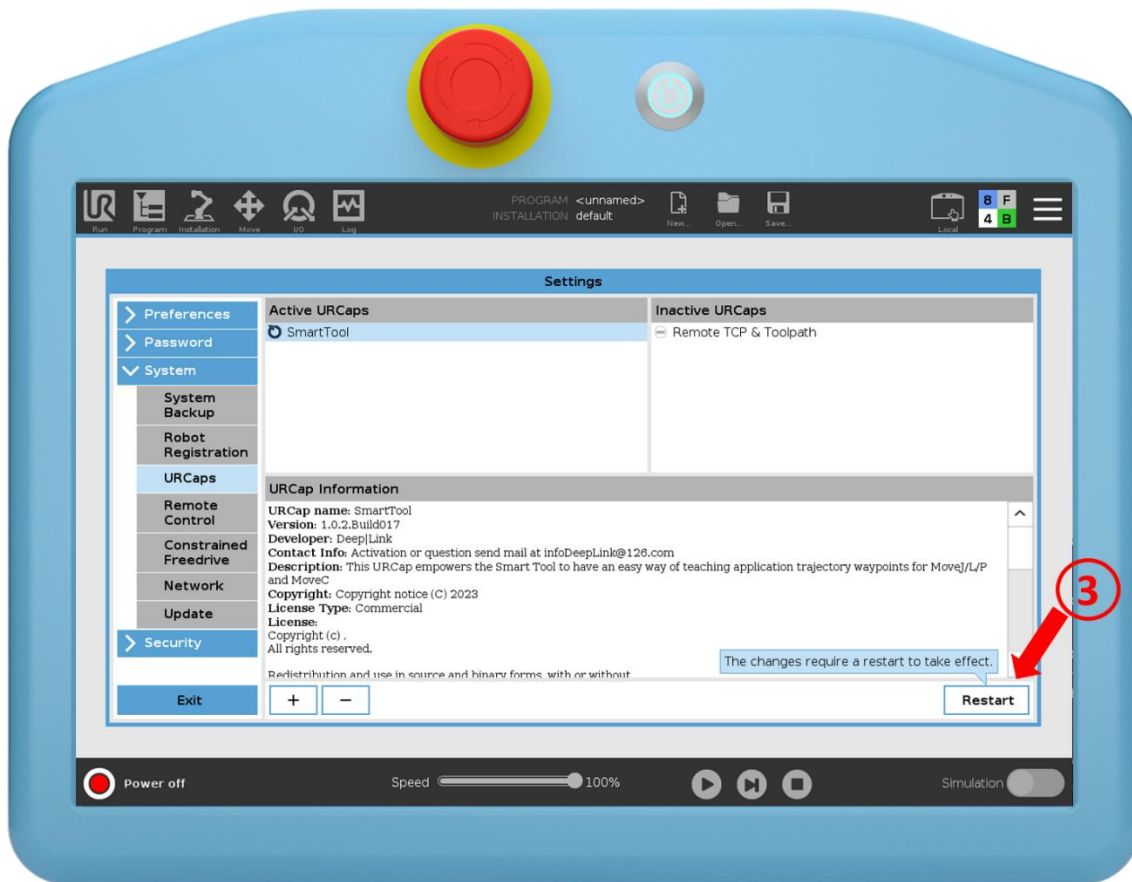


Figure 3 Installation 3rd step

4th step: Click **Installation** and click **License Import** button showed in Figure 4 to navigate in directory for the corresponding license file, subsequently click **Activate** button until it will get Figure 5 message box which means license activation is completed. The <Enable Freedrive> checkbox is also needed to check.

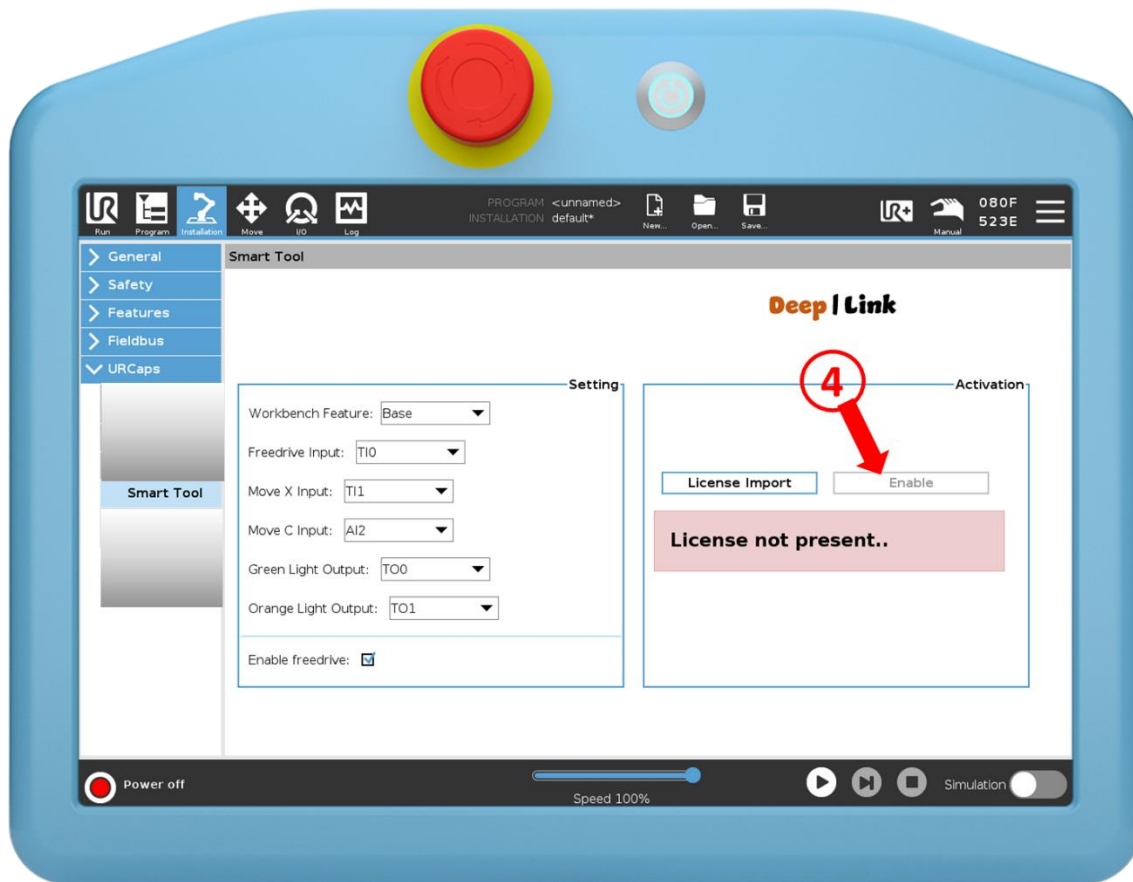


Figure 4 Installation 4th step

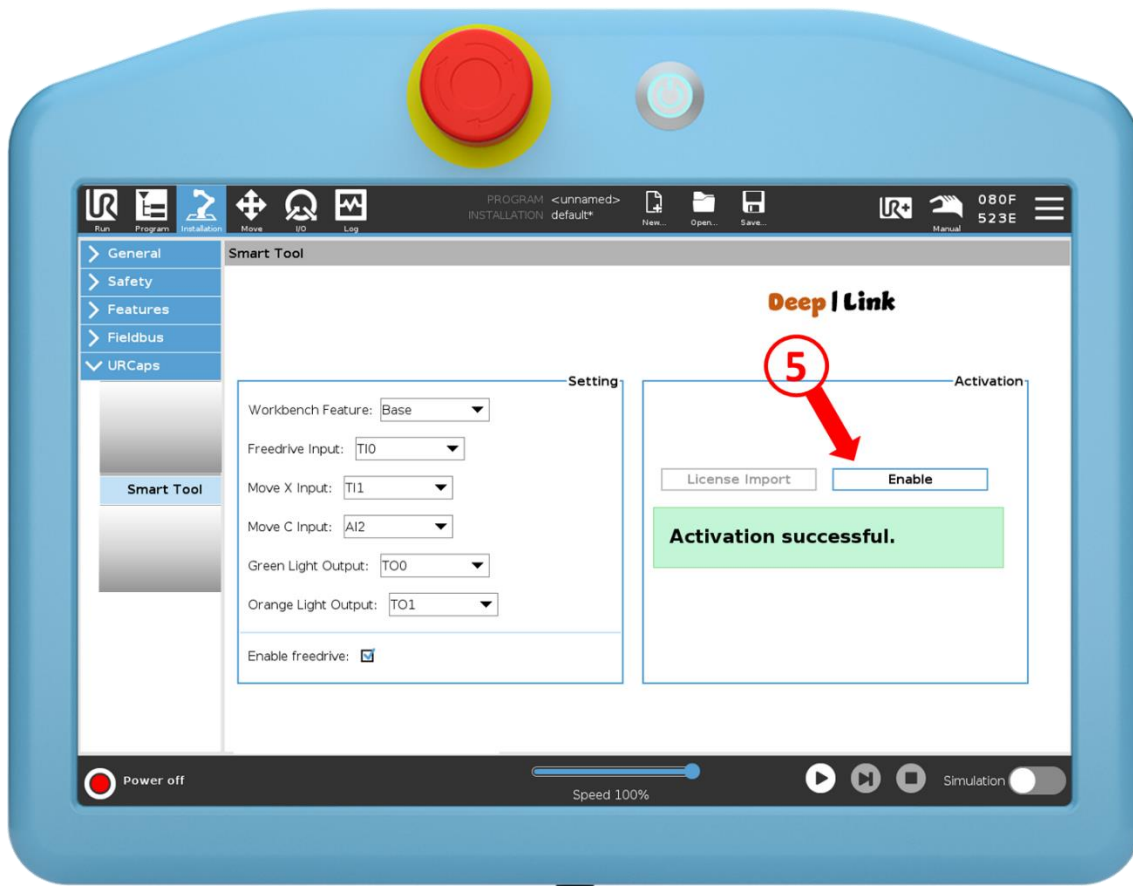


Figure 5 Installation activation view

5th step: The next step is to take care of tool I/O configuration, it can be as simple as going to Installation -> General -> Tool I/O and select SmartTool from the menu as being shown in Figure 6.

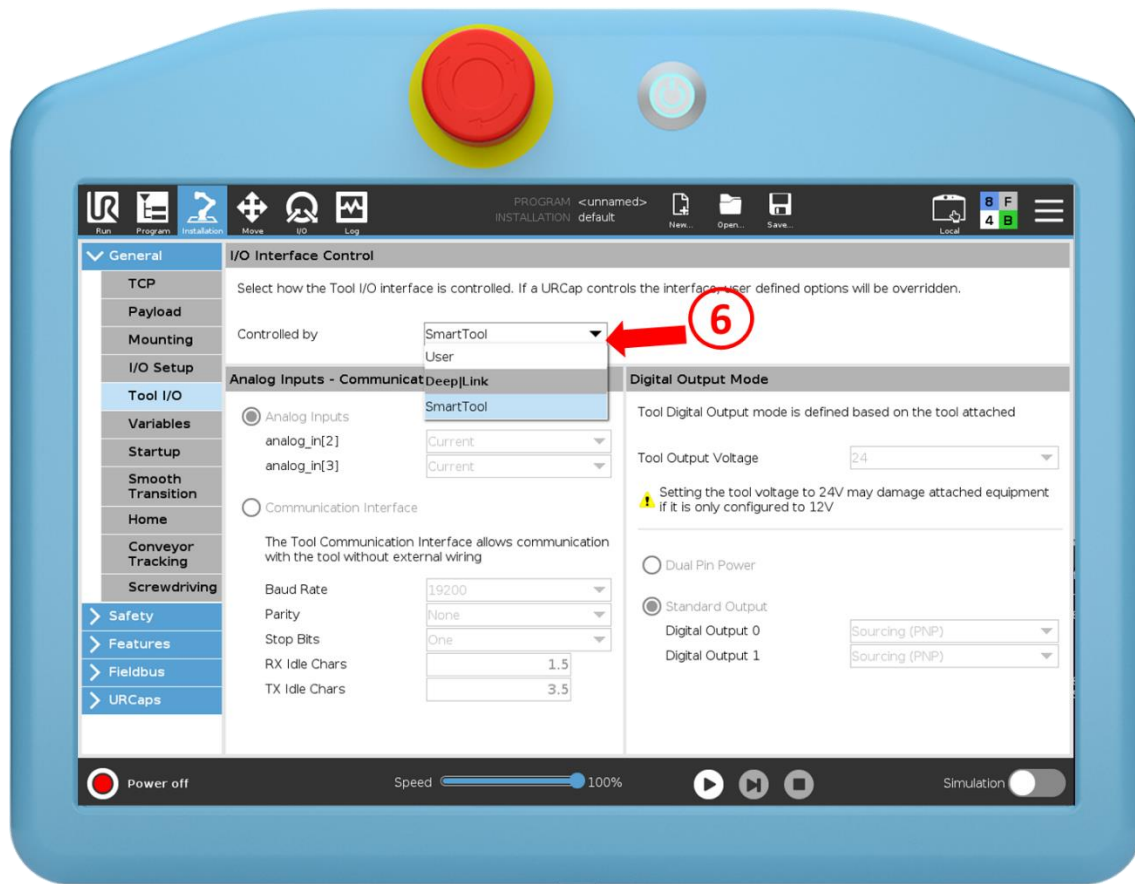


Figure 6 Installation Tool-IO configuration.

For UR20 case:

For Universal Robots UR20

To comply with UR20 unique safety design, the Smart Tool IO signal will be wired to robot controller cabinet, below is a workaround procedure:

1. in the Tool I/O setting please make sure it selects "Controlled by - Smart Tool",
2. Installation->URCap-> Smart Tool page, make the IO configuration that reflects real connection,
3. in I/O tab page , make the corresponding analog_in configured as Current, shown in Figure 7 and Figure 8.



Figure 7 UR20 cobot IO setting procedure

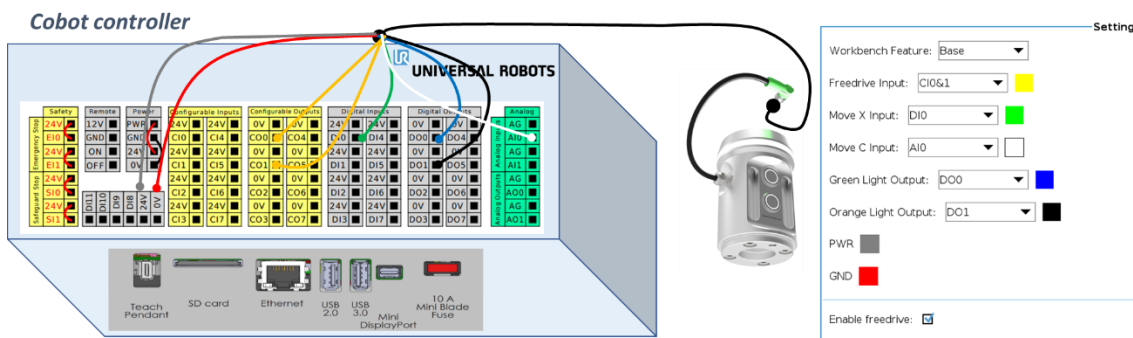


Figure 8 UR20 cobot IO wiring

6th step: Eventually click tool bar button on Polyscope top **Save / Save Installation As..** to save current license so user won't have to configure Installation every time reboot. And now all installation is completed.

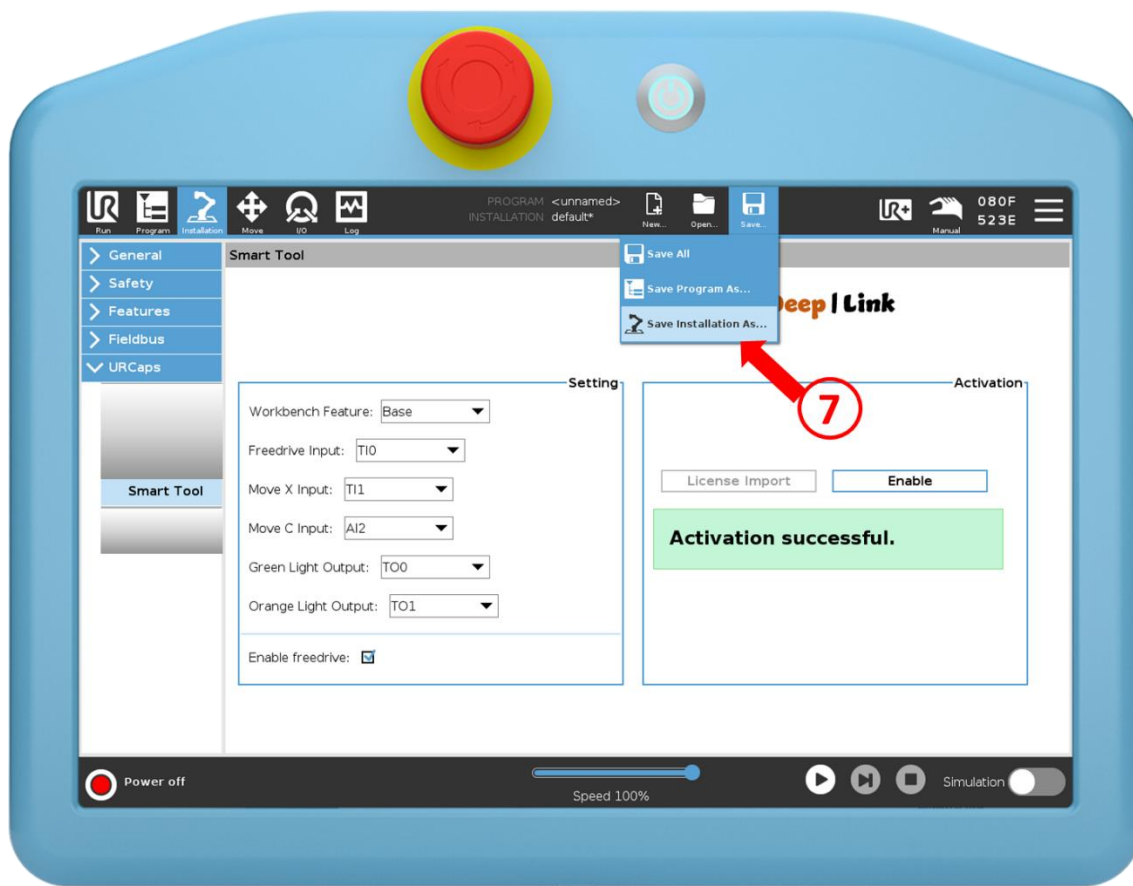


Figure 9 Save installation configuration.

3. Electrical Drawing

	Color	Signal	Description
8	Red	GND	Ground
5	Gray	POWER	0V/12V/24V
7	Blue	TO0/PWR	Digital Outputs 0 or 0V/12V/24V
6	Pink	TO1/GND	Digital Outputs 1 or Ground
4	Yellow	TI0	Digital Inputs 0
3	Green	TI1	Digital Inputs 1
1	White	AI2 / RS485+	Analog in 2 or RS485+
2	Brown	AI3 / RS485-	Analog in 3 or RS485-



Figure 10 Tool I/O signal mapping

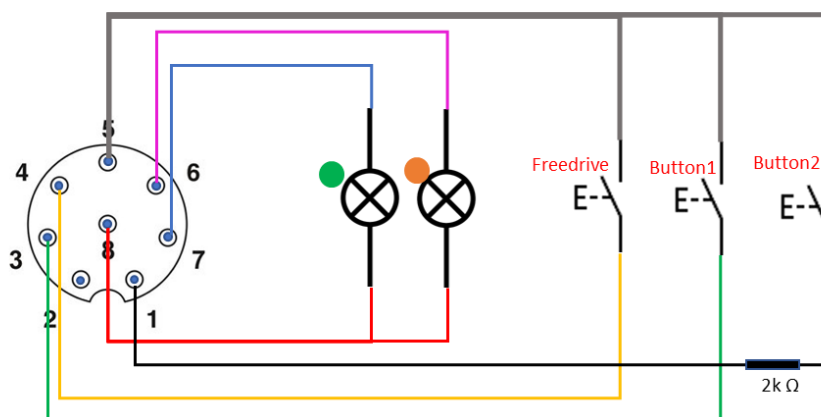


Figure 11 Electrical wiring drawing

4. Product Specification & Mechanics

ITEMS	VALUE
Weight	745 g
Material	Aluminum, PP plastic
Working temperature	5 ~ 50°C
Store temperature	-25 ~ 55°C
IP protection level	IP54
LED color type	Green, Orange
LED maximum blink frequency	10 Hz
Packing list	Smart Teach Tool x1 Screw M6x35, A2-70 x4 Pin D6x16 x1

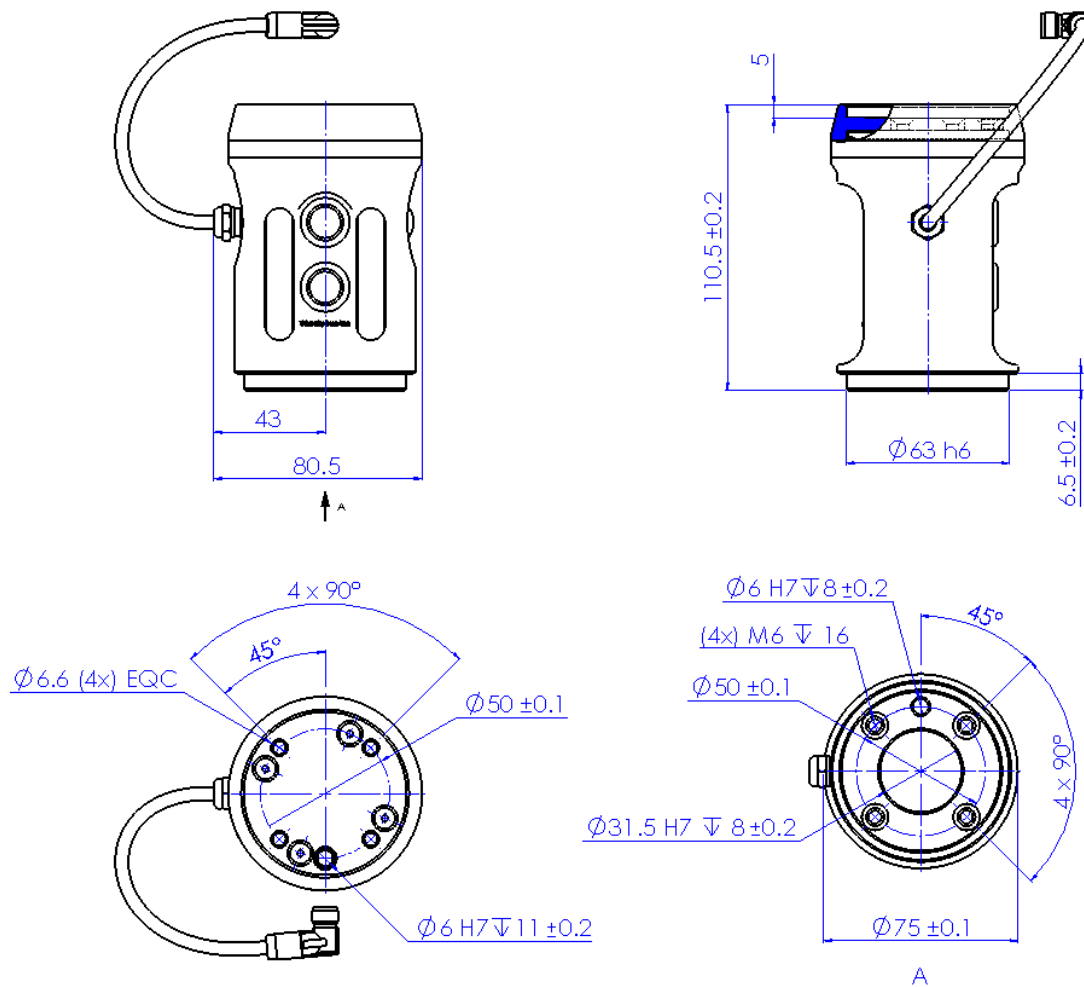


Figure 12 Product's Mechanic Dimensions

5. Activation

Send your question or request at mailbox: infoDeepLink@126.com

6. Context configuration

6.1 Tool Teach ProgramNode

This section demonstrates the 2 URCapProgramNodes.

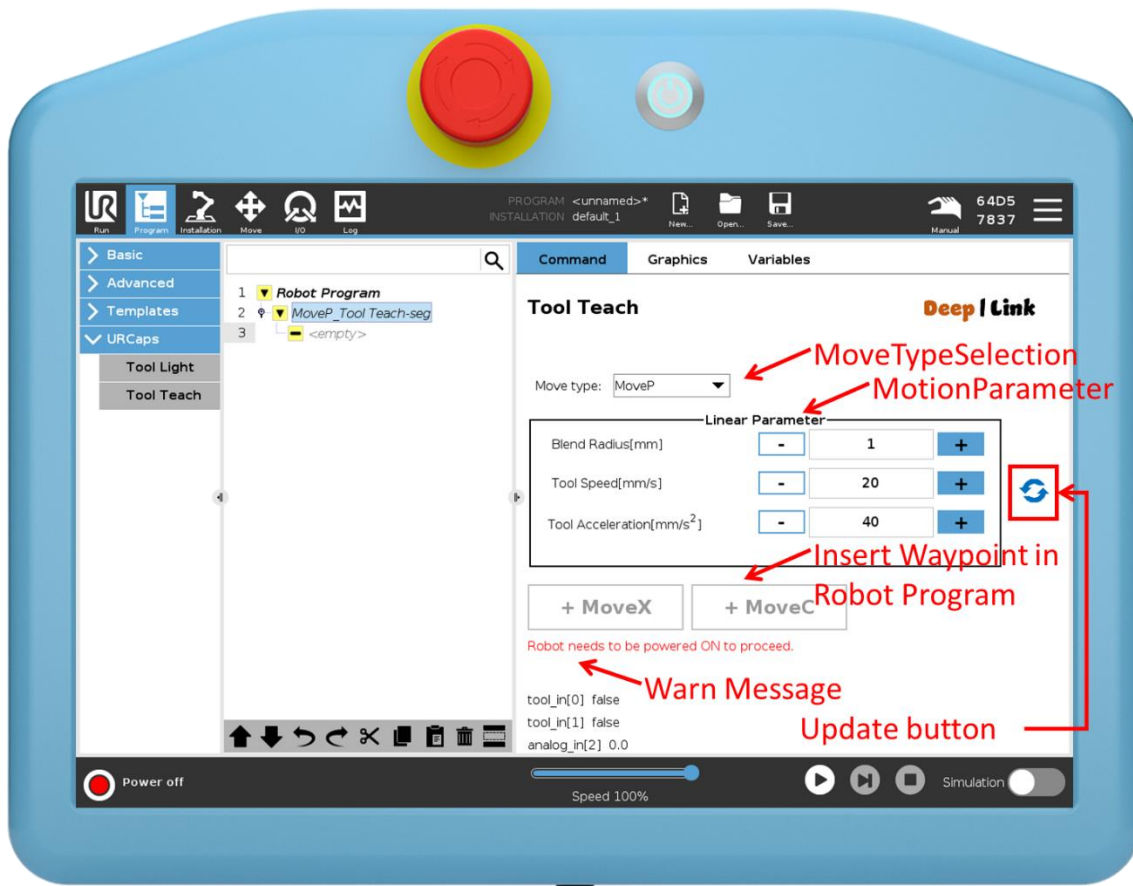


Figure 13 Tool Teach program node interface, the MotionParameter area permits linear/angular motion parameter specification, and these data will be effective in further inserting waypoint/Cirwaypoint nodes, if you wants to rewrite previous nodes motion parameters, then the Update button can be used to realize this function.

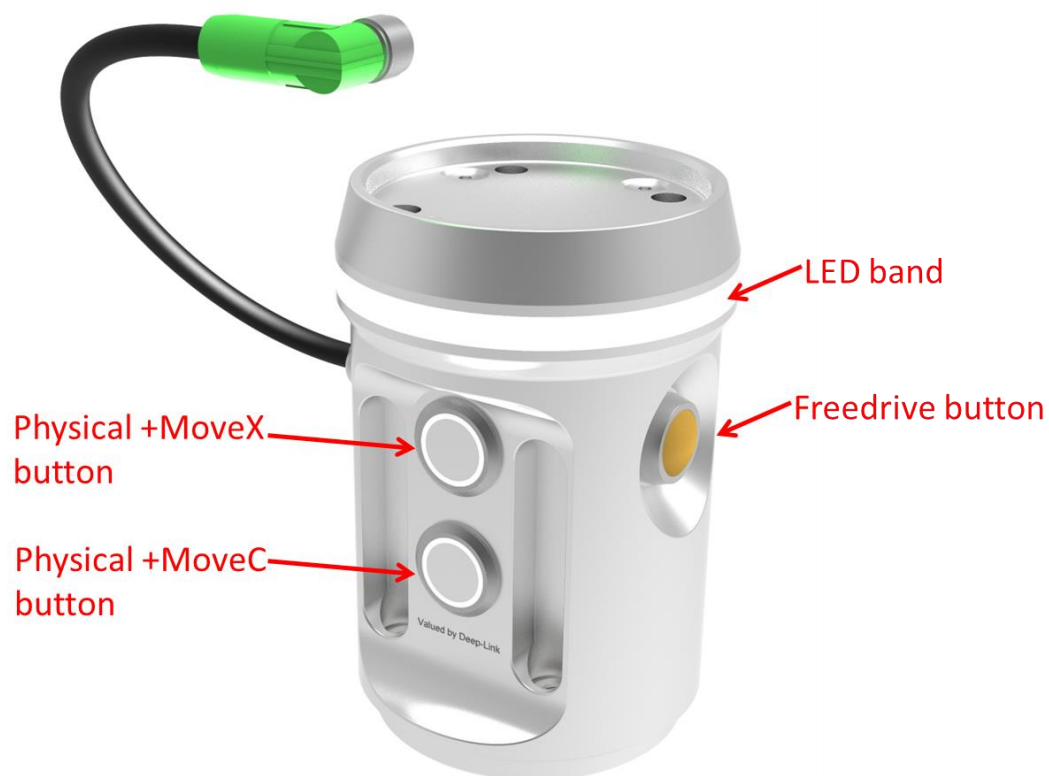


Figure 14 Physical product button & illumination function

6.2 Tool Light ProgramNode

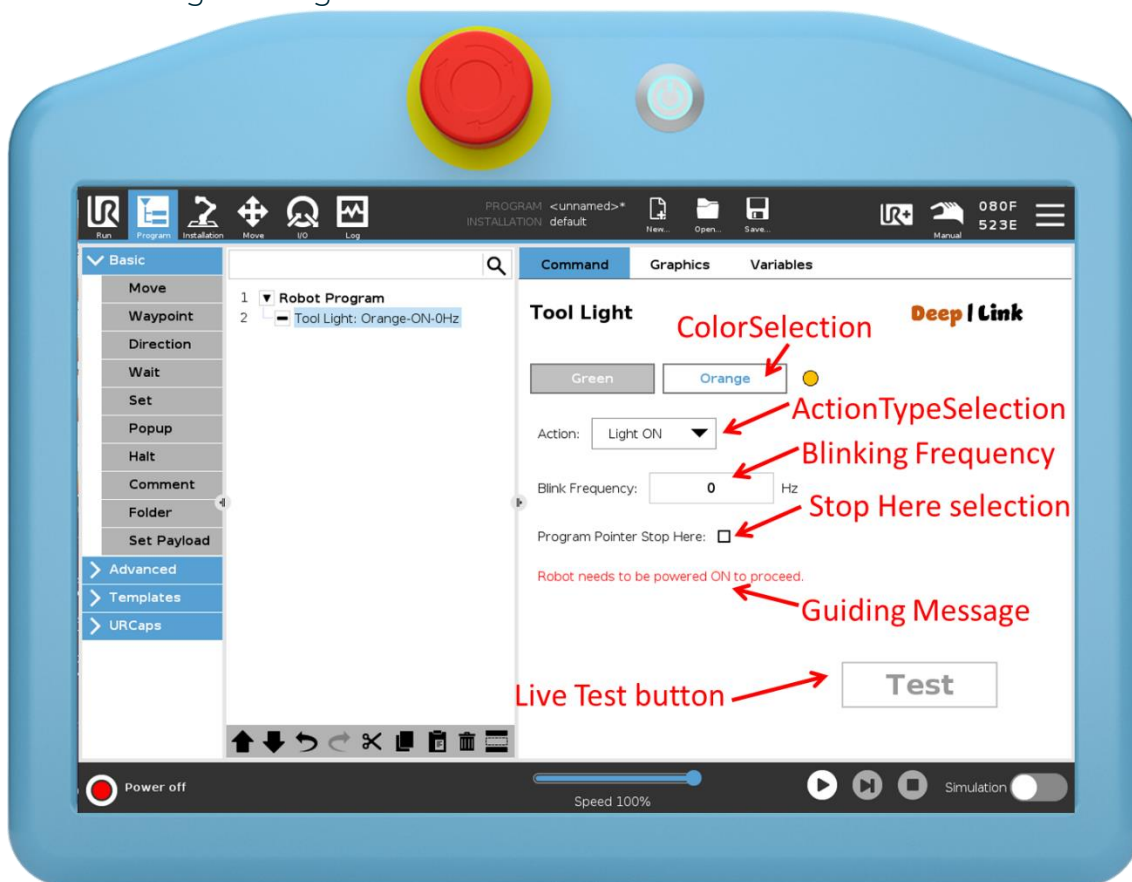


Figure 15 Tool Light program node interface, Blink frequency 0 Hz means the LED will light up constantly, currently there are 2 colors available as Green & Orange, and the Action options are Light ON and Light OFF.

6.3 Trajectory offsetting

In a context of user desires to offset current robot trajectory without modifying waypoint, it is suitable to consider a Trajectory offsetting within Smart Tool URCap. It is possible to create the workbench plane by Polyscope default function in Installation -> Features -> Planes as Figure 17, subsequently, you can select this workbench feature in Installation -> URCaps -> Smart Tool combobox as Figure 18. The robot will be able to run same relative trajectory in the taught plane into new target plane.

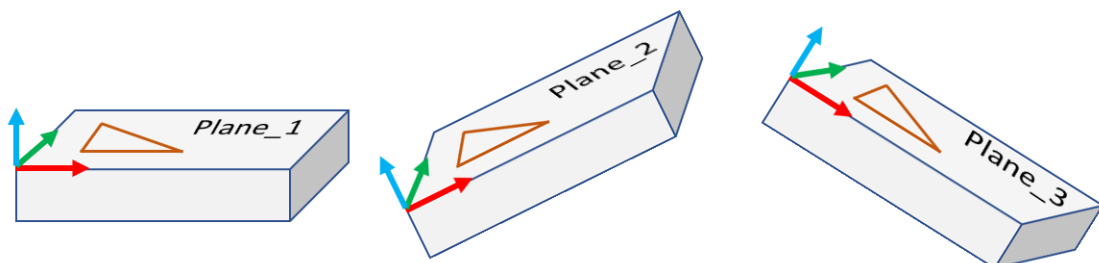


Figure 16 Trajectory offsetting context

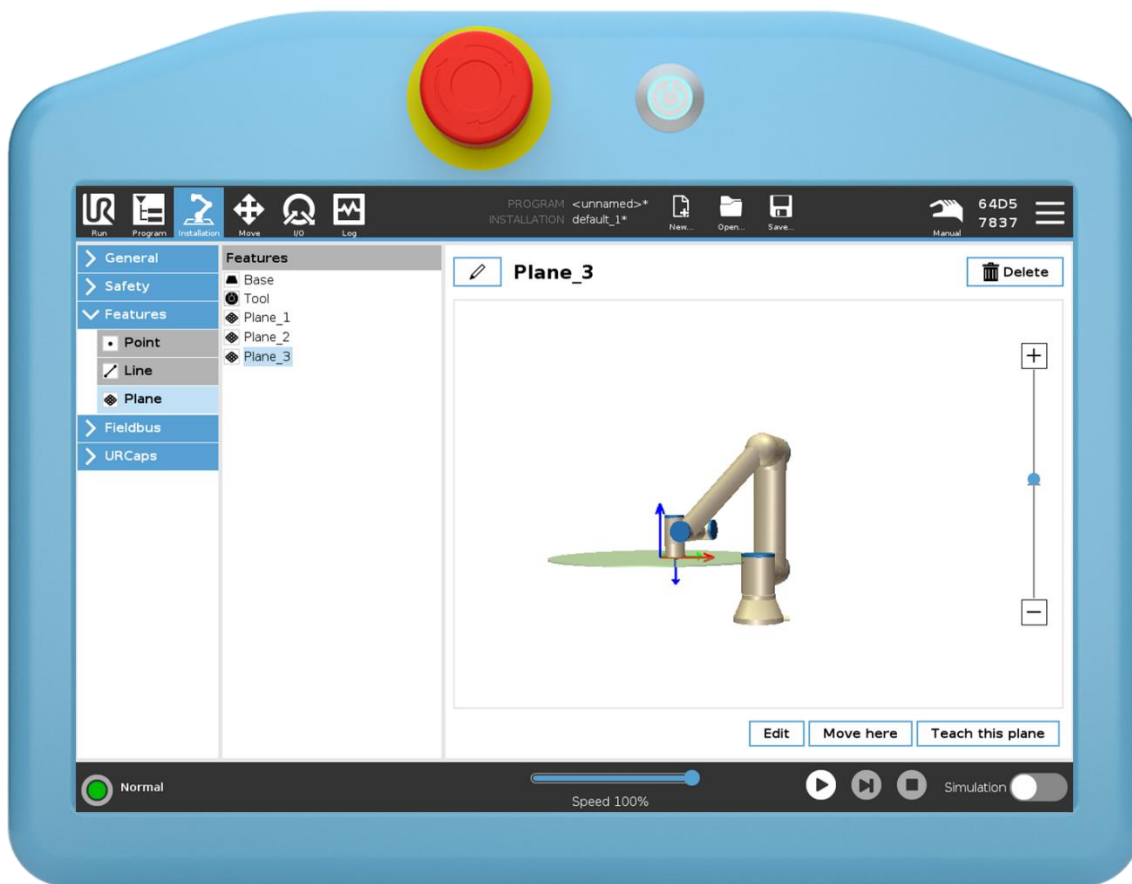


Figure 17 Create feature Plane in Installation -> Features -> Planes.

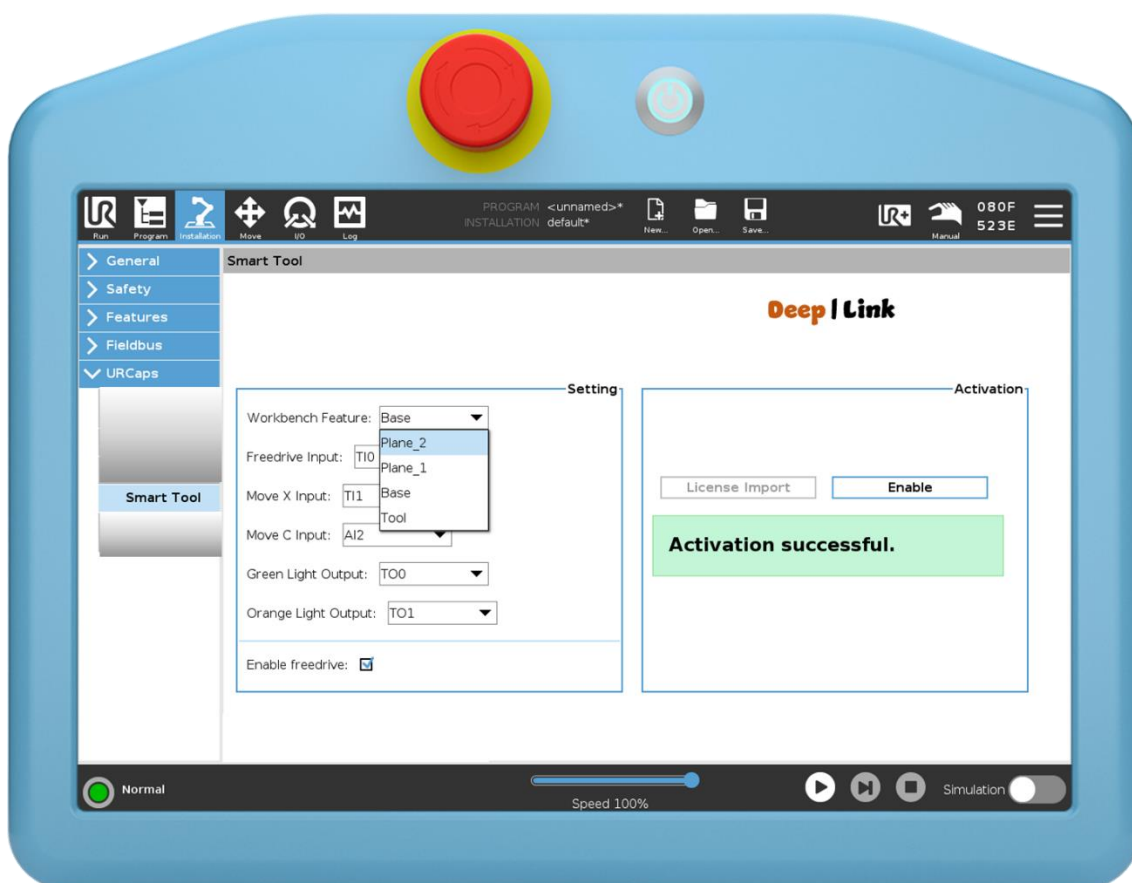


Figure 18 Selecting target offsetting feature in the combobox of Installation.

6 Error instruction

CATEGORY	NUMBER	DESCRIPTION
Warning	001	Robot needs to be powered ON to proceed. -> Please power on cobot
Warning	002	Please make a move type selection. -> So here user will need to make a move type selection in Tool Teach interface
Warning	003	Tool-IO needs to configure. -> please follow 2-Installation / 5th step to setup the tool-IO configuration.
Warning	004	Reached trial limit. -> This will happen when license is not activated and urcap is in trial mode, and the maximum moveX waypoint quantity is 4 and MoveC is 2 waypoint maximum to formulate 1 curve complete.
Warning	005	Please enable Freedrive at InstalltionNode. -> This warn suggest to check the checkbox in Installation Node as being explained in 2-Installation / 4th step.

7 Revision notes

Version	Description	Time [YYYY-MM-DD]
1.0.2-Build017	Initial release	2023-May-10
1.0.4-Build005	Add manual QR code, Add CN translation.	2023-June-05
1.0.4-Build006	Improve live test button performance, Improve CN translation in URCapProgramNode, Add Copyright section	2023-July-15
1.0.4-Build010	Add Program Pointer stop here function in Tool Light node.	2023-08-20
1.0.4-Build011	Add Tool-DO runstate dependancy	2023-08-21
1.0.4-Build012	Add Feature offsetting function; Add waypoint "Move Here", "Set Point" button; Optimize shared motion parameter function. Fix Tool Light issue on runstate.	2023-09-23
1.0.4-Build015	Adjust Tool Light UI for easier programming.	2023-10-16
1.0.4-Build017	Build for UR+ compliance retrofitting. Adjust Chinese translation	2023-12-18
1.0.4-Build019	Optimize activation approach.	2023-12-27
1.0.4-Build020	General update.	2024-04-07
1.0.4-Build021	Add StartFromNode and BreakPointOnNode capability; Add MAC info in Installation node.	2024-05-07
1.0.4-Build023	Make DI/O configurable in InstallationNode to support Universal- Robot UR20 cobot. *Switch to ursim-5.15.0.126572	2024-07-12

*****Chinese Documentation / 中文文档*****

V 1.0.4

Smart Teach Tool URCap Manual

示教工具 产品手册

Deep | Link

发布于2023 年5 月，中国杭州



1. 摘要

此产品为 Universal-Robots 机器人定制开发的机器人示教工具产品，它包括一个非常容易上手且使用舒适的机械拓展工具法兰，为机器人增加了 **freedrive 按钮** 使现场操作的用户非常轻松的拖动机器人手臂，同时还装备了两个额外的按钮用于增加程序中的 **线性轨迹**，**关节运动轨迹**，和**弧线轨迹**。此外，它还包括一个**可编程指示 LED 灯带**，结合 URCap 软件可以方便在程序中插入控制等待的程序。我们相信这个功能对**提高用户操作机器人效率**有显著效果，尤其在一人照看多台机器人时，指示灯对他将有很大帮助，因为通过灯带信号，他可以很轻松了解每台机器人执行任务的情况。本产品的设计延续了 Deep-Link 一贯的设计理念：**简易、高效**，同时最大限度使用示教器原生指令以保证用户**一致的体验和最大的灵活性**。

URCap 软件对机器人软件要求：

Universal Robots
e-series: 5.12 或 更新版本.

2. 安装

第 1 步：点击右上角的汉堡菜单

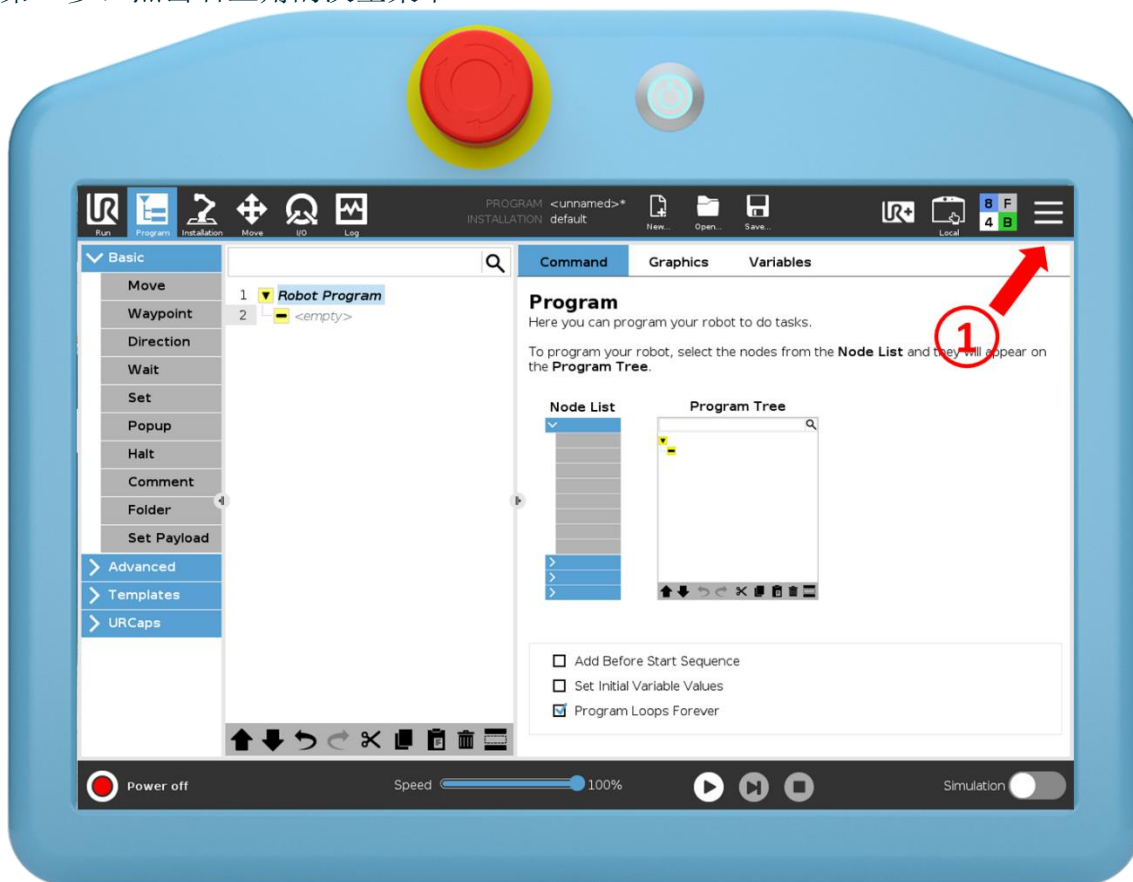


Figure 19 安装第 1 步

第 2 步：选择 设置 / 系统 / URCaps，随后点击屏幕下方的 “+”按钮。

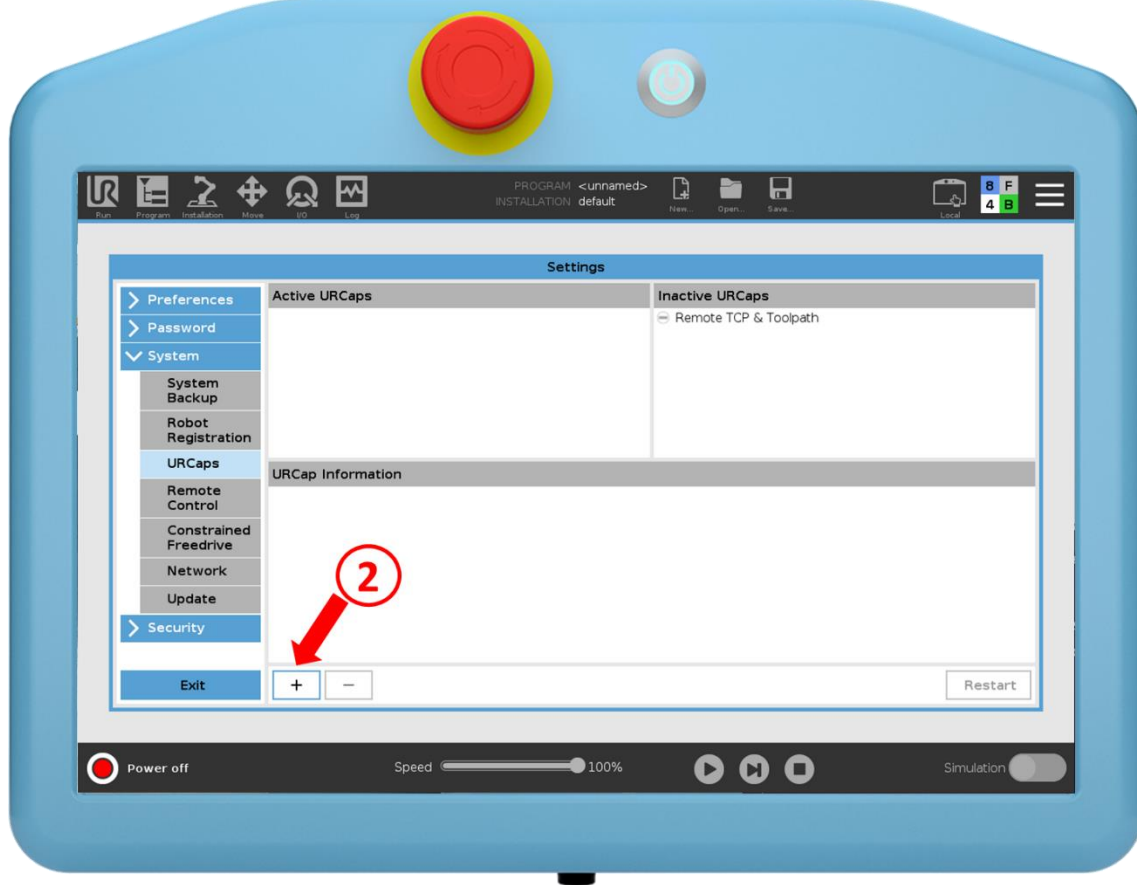


Figure 20 安装第 2 步

第 3 步：从文件浏览器中选择 <SmartTool-1.0.x .urcap> 文件并点击 打开 按钮，随后点击 重启。如图所示 Figure 21。

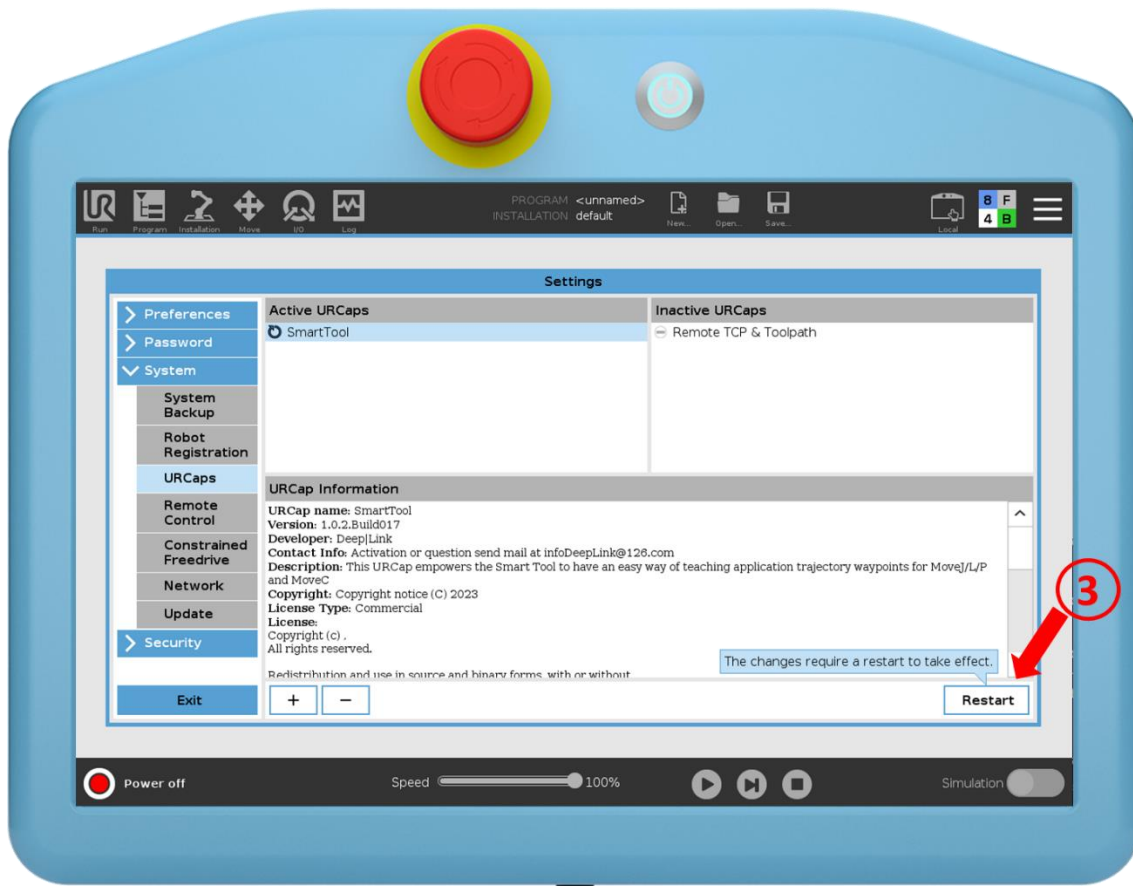


Figure 21 安装第3步

第4步：点击 **安装设置**，如图 Figure 22 所示，随后点击 **授权导入** 按钮，在文件夹中对话框中选择相应的激活文件，随后点击 **激活** 按钮，直到出现如 Figure 23 所示的激活成功页面。

<激活 Freedrive> 的选项框同样需要勾选。



Figure 22 安装第 4 步

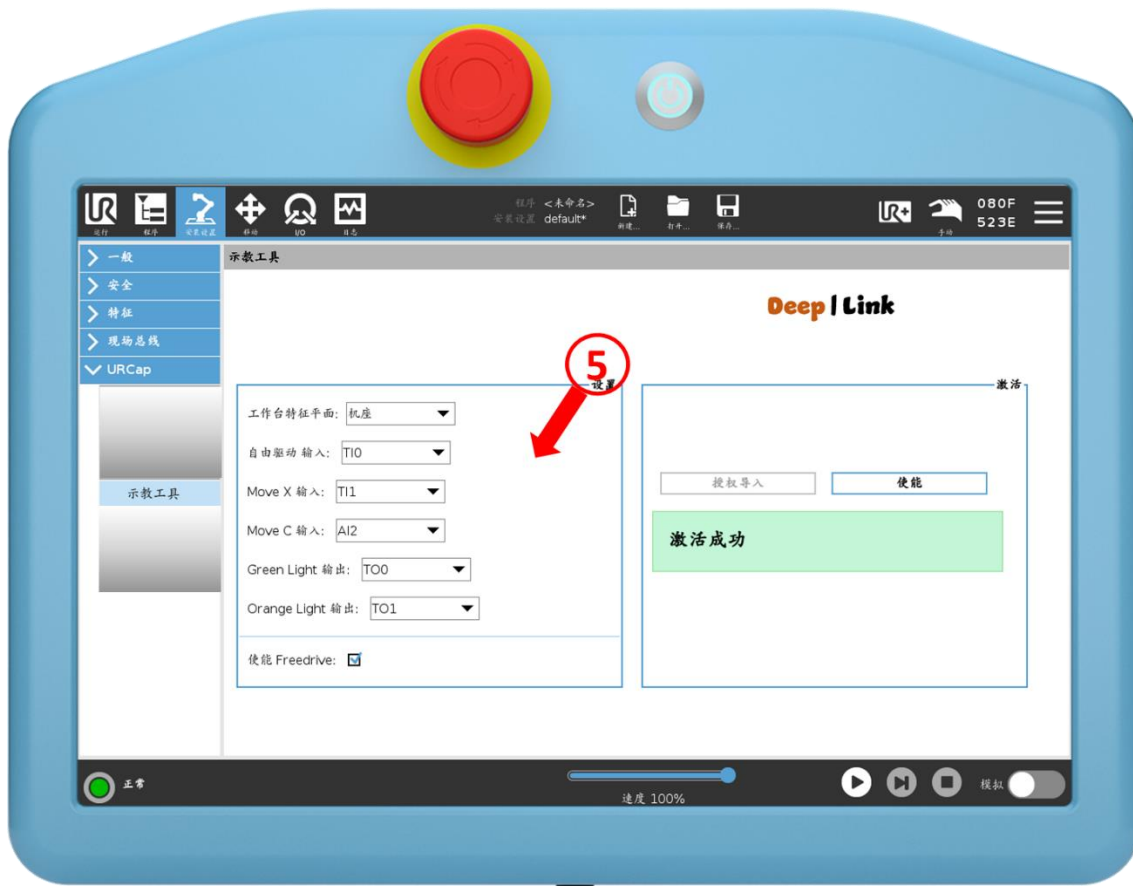


Figure 23 安装激活成功页面

第 5 步：接着一步是设置工具 I/O，请选择 **安装设置** -> **一般** -> **工具 I/O** 并在下拉菜单中选择 SmartTool，如图所示 Figure 24。



Figure 24 安装第 5 步：工具 IO 设置。

对于 UR20 情况:

对于 Universal Robots UR20 机器人说明:

为适配 UR20 独特安全设计，示教工具线缆直连机器人控制柜，以下是操作步骤，如图所示，Figure 25，Figure 26：

1. 在工具 I/O 界面请选择“控制者 - Smart Tool”，
2. 移步 安装设置->URCap-> 示教工具界面，根据实际接线配置 IO 通道，
3. 移步 I/O 界面 ，确保对应的 模拟输入通道被配置为“电流”。



Figure 25 UR20 IO 配置操作步骤示意

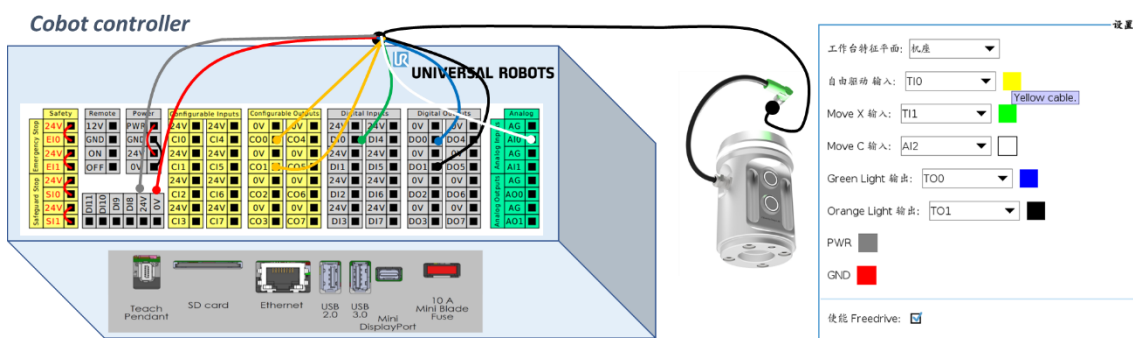


Figure 26 UR20 IO 接线示意图

第 6 步：点击屏幕上方的 **保存/ 安装设置另存为...** 已保存当前做过的设置，这样下次开机时您就不需要再进行以上配置步骤。至此，安装完毕。

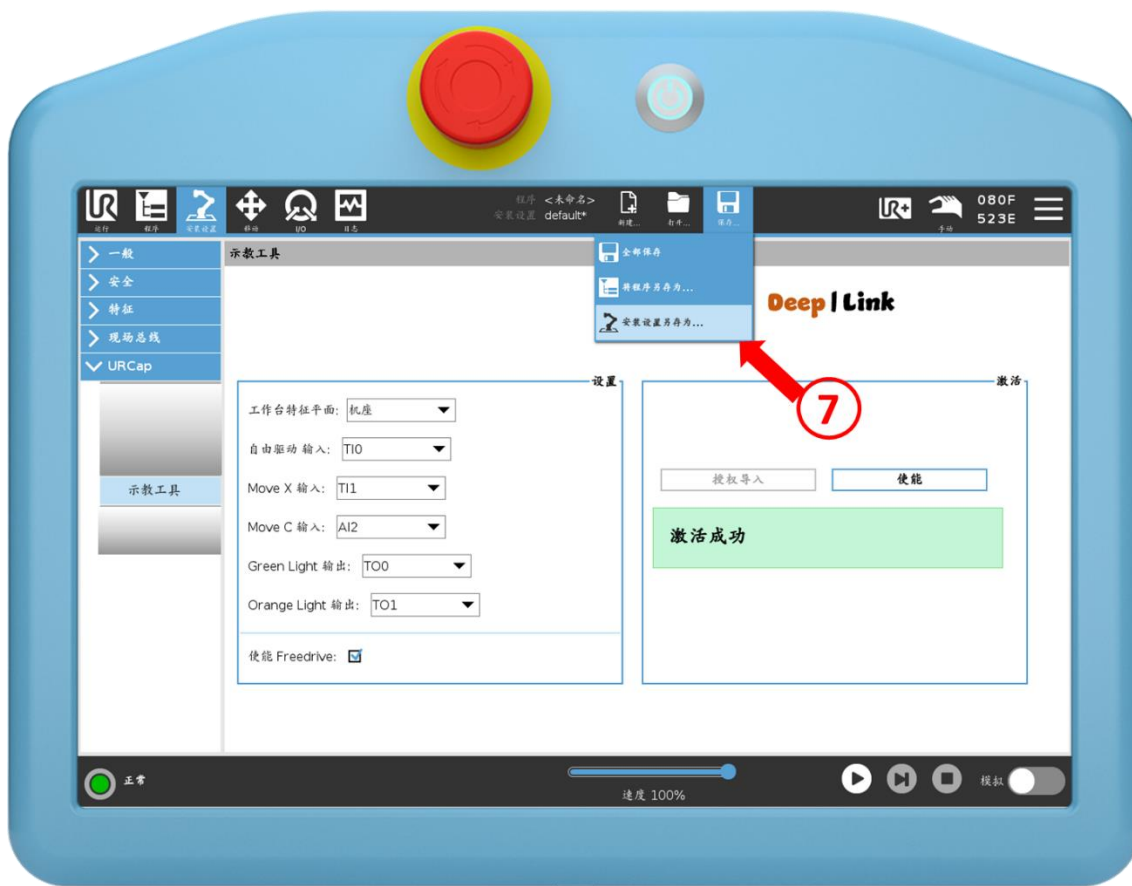


Figure 27 Save installation configuration.

3. 电路图纸

	Color	Signal	Description
8	Red	GND	Ground
5	Gray	POWER	0V/12V/24V
7	Blue	TO0/PWR	Digital Outputs 0 or 0V/12V/24V
6	Pink	TO1/GND	Digital Outputs 1 or Ground
4	Yellow	TI0	Digital Inputs 0
3	Green	TI1	Digital Inputs 1
1	White	AI2 / RS485+	Analog in 2 or RS485+
2	Brown	AI3 / RS485-	Analog in 3 or RS485-



Figure 28 Tool I/O 信号映射表

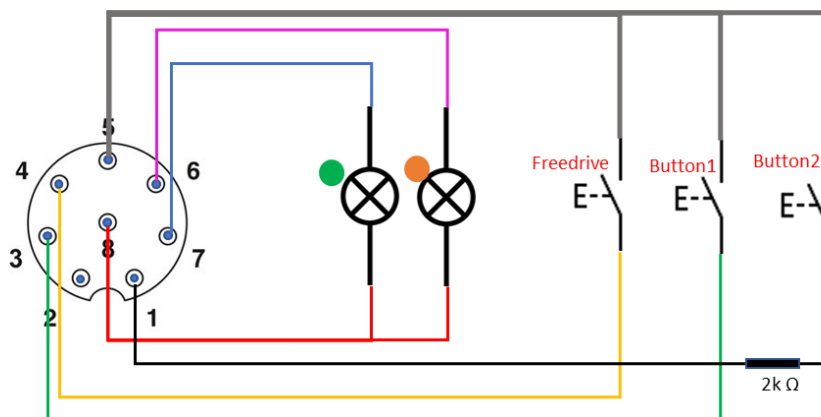


Figure 29 信号连接图

4. 产品参数表和 机械设计

类别	内容
重量	745 克
材质	铝, PP 塑料
工作温度	5 ~ 50°C
储存温度	-25 ~ 55°C
IP 防护等级	IP54
LED 颜色种类	绿色, 橙色
LED 最大闪烁频率	10 Hz
包装清单	示教工具产品 x1 螺丝 M6x35, A2-70 x4 销 D6x16 x1

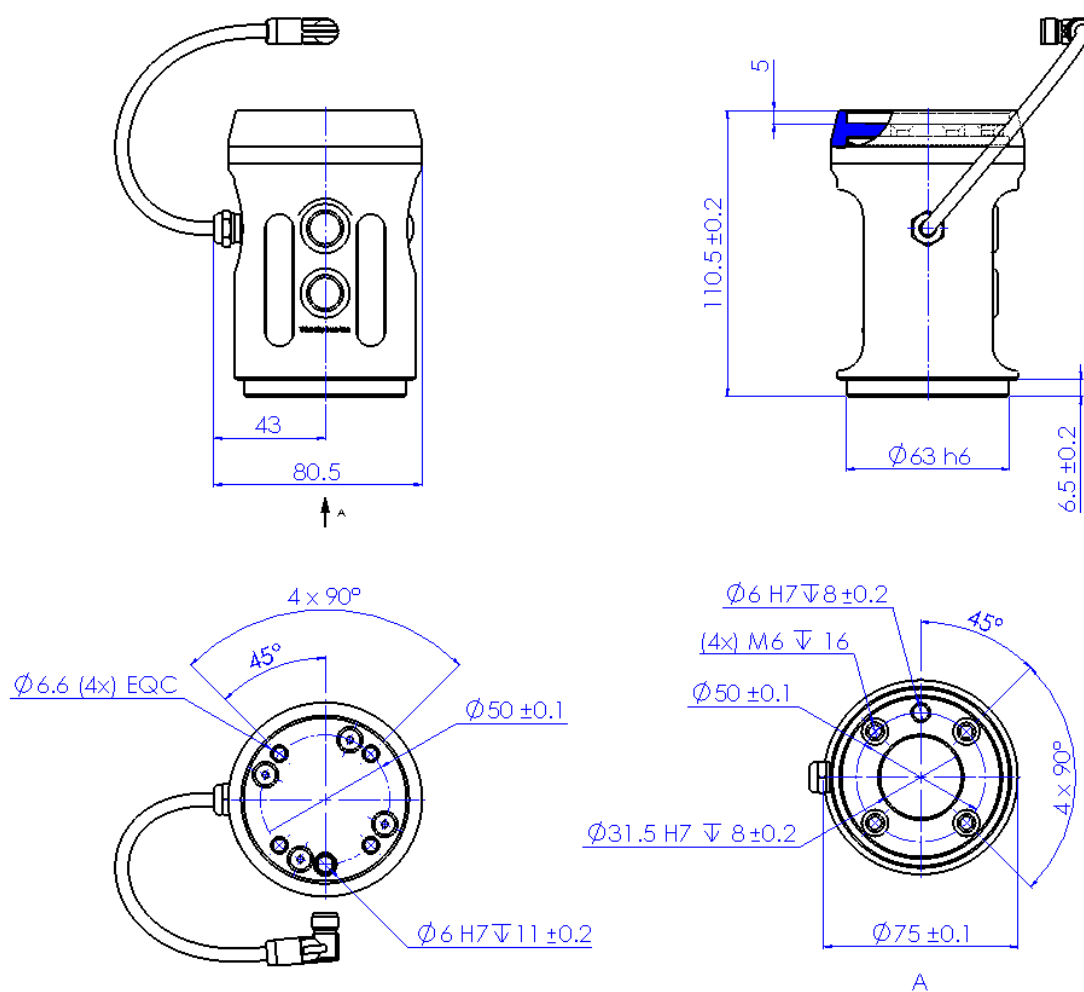


Figure 30 Product's Mechanic Dimensions

5. 激活

请将您的激活需求或问题发送至邮箱: infoDeepLink@126.com

6. 场景配置

6.1 Tool Teach 工具示教



Figure 31 工具示教程序页面



Figure 32 产品功能展示图

6.2 Tool Light 工具信号灯



Figure 33 工具信号灯编程页面，闪烁频率0Hz 意味着LED 灯常亮，当前有2 中颜色可选【绿色、橙色】，有2 中动作命令可选【开灯、熄灯】。

6.3 路径整体偏移

在工作台发生变化，而工件相对工作台不变时，可以考虑使用路径整体偏移功能以实现快速编程，如 Figure 34。

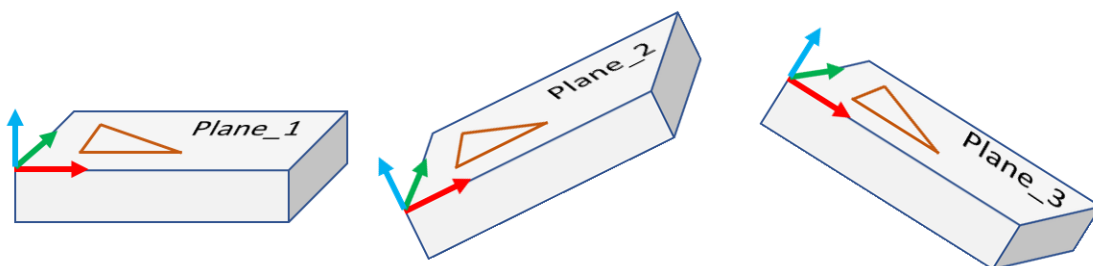


Figure 34 路径整体偏移示意图

首先，可以在安装设置->特征->平面 中创建新的工作台平面，如 Figure 35。随后，可以在安装设置->URCap->示教工具 中选择对应的工作台特征平面，这样机器人的轨迹可以整体偏移 to 新的屏幕中，如 Figure 36。

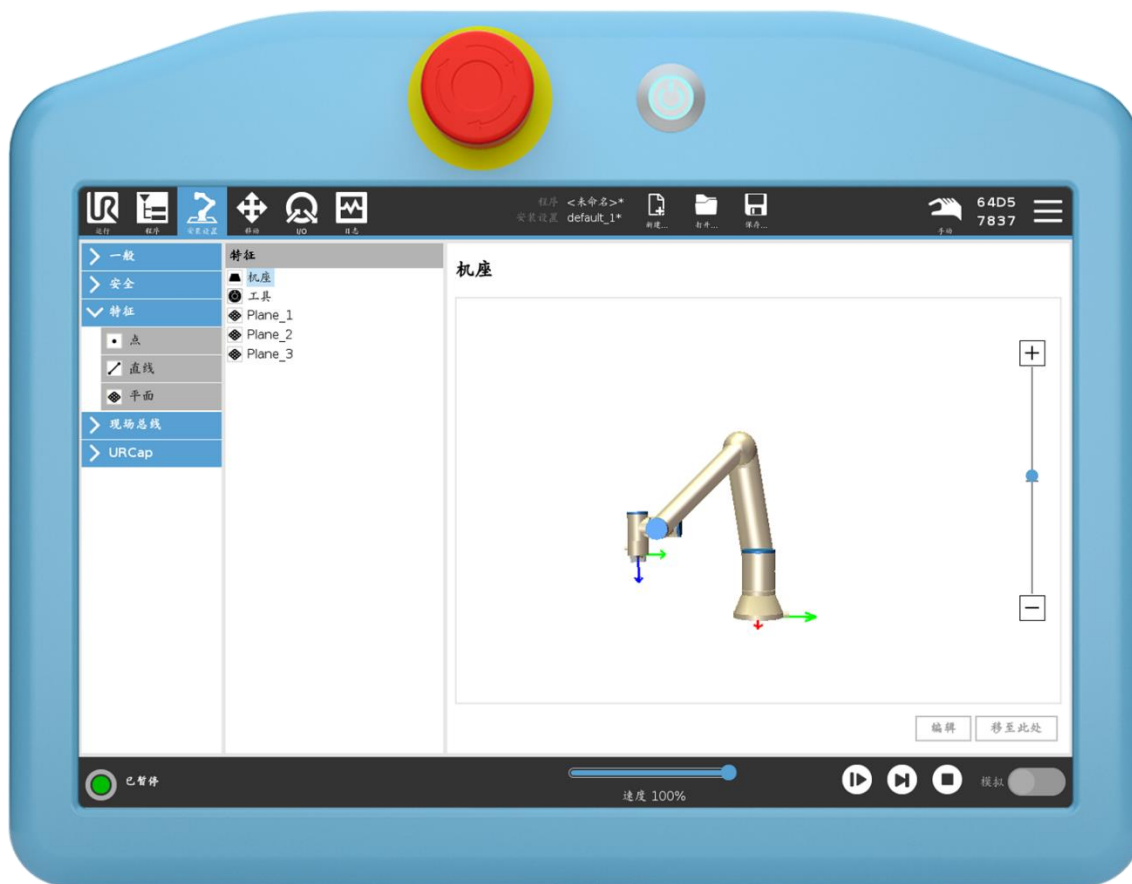


Figure 35 创建平面

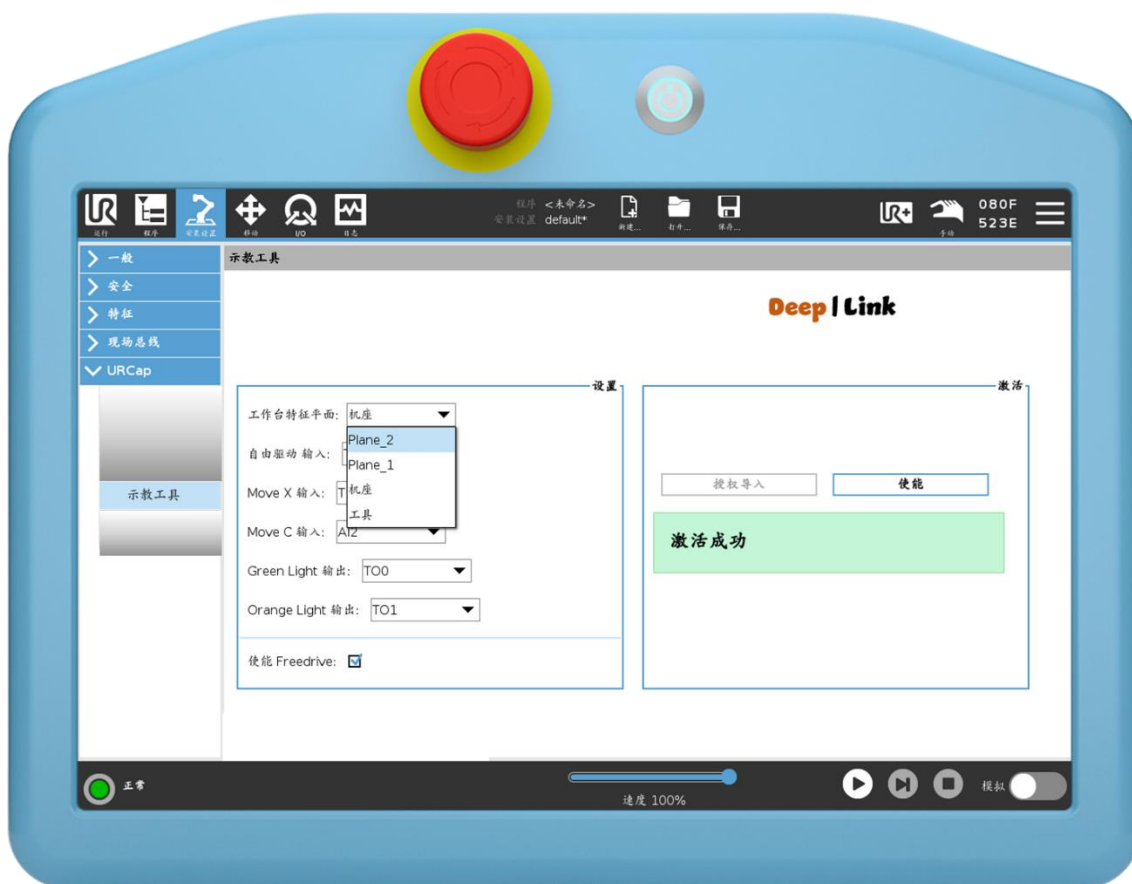


Figure 36 选择目标工作台特征平面

7. 错误信息

种类	编号	描述
警告	001	机器人需要先上电. -> 请给机器人上电
警告	002	请选择移动类型. -> 用户需要先定义要添加路点的类型【MoveJ, MoveL, MoveP】再操作物理按钮。
警告	003	请先进行 Tool-IO 设置. -> 请参照第 2-安装 / 第 5 步章节设置工具 I/O 设置。
警告	004	达到试用限值. -> 当 URCap 未激活时会出现这种情况，在试用状态下 moveX 最多可添加 4 个路点，MoveC 最多可添加 2 个路点。
警告	005	请在安装界面使能 Freedrive. -> 这个警告提示用户需要在安装设置页面软件使能 Freedrive 才可以操作 Freedrive 按钮。参见 2-安装 / 第 4 步。